

Instructions

Oversized Clutch Latch Valve



NOTE: Fits any of four locations.

Tool Kit

Part No.

- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.





1. Disassembly

spring, setting both aside for reuse.

a. Slide out OE spring retainer plate and remove OE

- b. Remove and discard OE clutch latch valve.
- c. Thoroughly clean valve bore before reaming.

2. Bore Reaming

Ream clutch latch valve bore (for reaming instructions/ reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-144740-TL21** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Be certain all debris has been removed from valve bore and valve body.
- b. Install Sonnax oversized clutch latch valve, large spool outboard.
- c. Reinstall OE spring.
- d. Reinstall OE spring retainer plate.

4. Final Testing

Vacuum tests at the ports indicated hold the recommended minimum 14 in-Hg.





©2021 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company

144740-21-IN 08-19-21