

### Instructions

# Toyota/Lexus A750E, A750F, A760E, A760F, A760H, A761E, A960E, A960F, AB60E, AB60E



**NOTE:** Before disassembly, note position of retainer on OE sleeve. Retainer must be returned to the corresponding step on Sonnax sleeve during installation.

#### 1. Disassembly

- a. Remove OE retainer after noting its position on OE boost sleeve. Set retainer aside for reuse.
- b. Remove and discard OE boost assembly.

#### 2. Installation & Assembly

a. Install Sonnax boost valve assembly.

- b. Reinstall OE retainer. Ensure retainer is set into the corresponding step on Sonnax sleeve that was noted before disassembly.
- c. Ensure OE retainer is set at the same step location on the Sonnax boost sleeve as it was on the OE boost sleeve.

#### **3. Final Verification**

Vacuum testing at the ports indicated holds the recommended minimum 16 and 18 in-Hg.



## **Boost Valve Kit**



- Outer Boost Valve
- Inner Boost Valve
- Sleeve