


Instructions

Lockup Control Plunger Valve Kit

Part No. 157740-37K

- Sleeve
- Plunger Valve

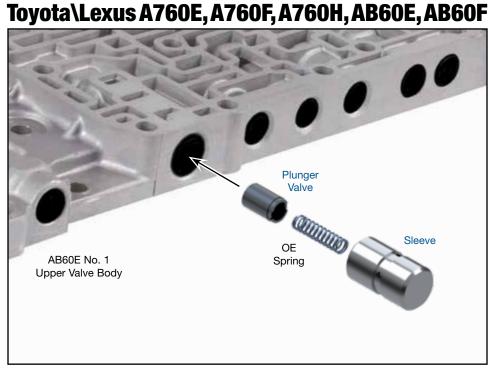

1. Disassembly


- a. Remove OE retainer, set aside for reuse.
- b. Remove OE lockup control sleeve/plunger/spring assembly. Leave OE lockup control valve in bore.
- c. Remove OE spring from assembly, set aside for reuse.
- d. Discard OE plunger valve and sleeve.

2. Installation & Assembly

- a. Remove Sonnax plunger valve from sleeve and install OE spring into Sonnax plunger valve spring pocket.
- b. Install Sonnax plunger valve and spring into Sonnax sleeve, spring in first. Make sure spring remains in plunger valve spring pocket.
- c. Reinstall OE retainer.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 16 in-Hg.

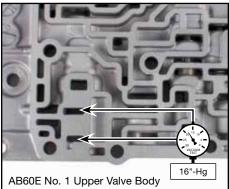

©2017 Sonnax Industries, Inc.

157740-37K-IN 09-12-17