


Manual Valve

Part No.

36940-22

NOTE: Fits all 5R110W units. Replaces OE valves with or without holes in long spool.

Ford 5R110W

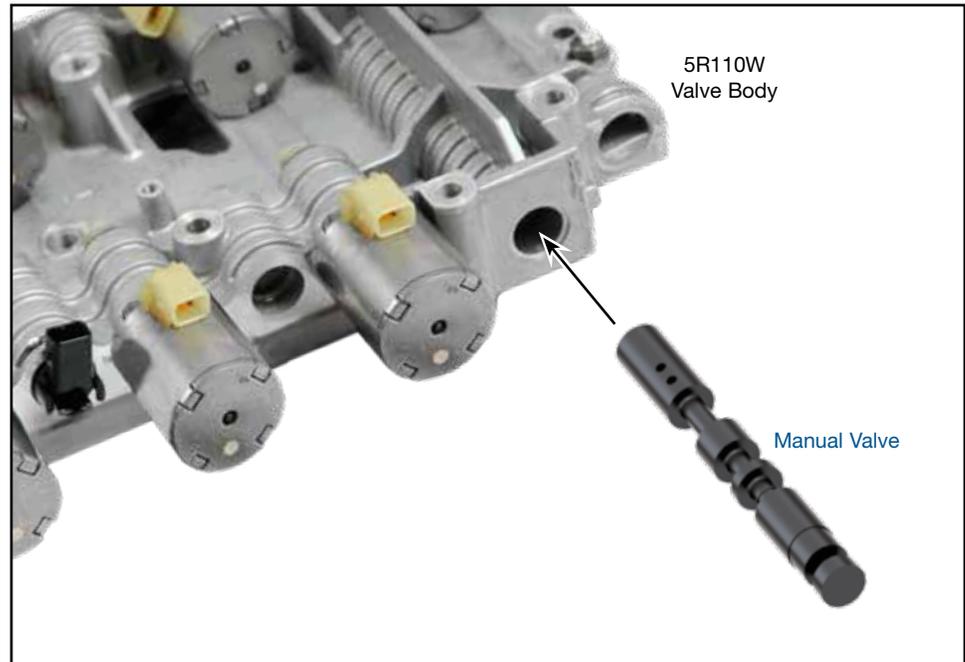

1. Disassembly

- Remove and discard OE manual valve.
- Thoroughly clean bore.

2. Installation & Assembly

- Insert Sonnax manual valve.
- Install valve body onto transmission case and assemble selector linkage connection per OE procedures.
- Cycle shifter through the PRNDL positions. Any binding or excessive tightness should be investigated and corrected.



NOTE: The OE linkage pivot points are known to wear and cause misalignment of the manual valve with the internal passageways of the valve body.



TECH TIP: Visually inspect low/reverse clutch circuits (land between two most outboard circuits), and line pressure/direct clutch circuits (land between two most inboard circuits), as wear is common. In these cases Sonnax oversized manual valve **36940-11** should be installed instead.