
TRANSMISSION PARTS

Instructions

Low/Reverse Retaining Ring

Part No. 36885

Ford 5R110W (Torqshift)

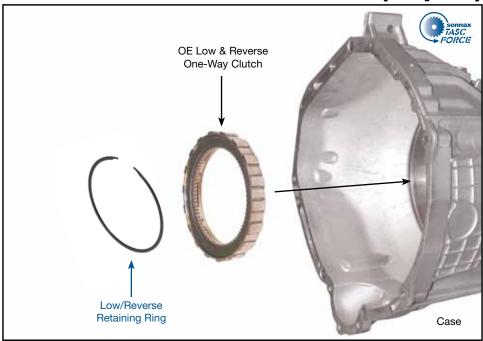

1. Disassembly

Remove and discard the OE low/reverse retaining ring.

2. Installation & Assembly

Install the Sonnax retaining ring so that ring ends are in the gaps between the lugs at the 12 O'clock position at the top of the case (see illustration).



©2012 Sonnax Industries, Inc. 36885-IN 03-09-12