

### Instructions

# Honda/Acura 5-Speed

## Lockup Shift Valve Kit

## Part No. 98892-16K

- Valve
- End Plug
- O-Rings (2)

1 Extra

**NOTE:** This kit fits several Honda/Acura 5-speed models. However, model to model, the appearance of valve bodies and the location of the lockup shift valve bore may vary. The BVGA model is illustrated here. See Honda **98892-16K** Application Chart for a detailed guide.





#### 1. Disassembly

- 1. Remove OE retaining clip, end plug, valve and spring from valve body bore.
- 2. Discard OE valve and end plug. Keep retaining clip and spring for reuse.

#### 2. Installation

- 1. Ensure all debris has been removed from the valve bore and valve body.
- 2. Reinstall OE spring.
- 3. Install Sonnax lockup shift valve.
- 4. Install Sonnax O-Ring onto Sonnax end plug and insert end plug, ensuring O-ring end is inboard.
- 5. Reinstall OE retaining clip to secure end plug.





©2020 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company