



Instructions

GM 400, 425

Pressure Regulator Valve Kit

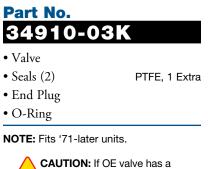

through balance hole, our valve cannot be used.

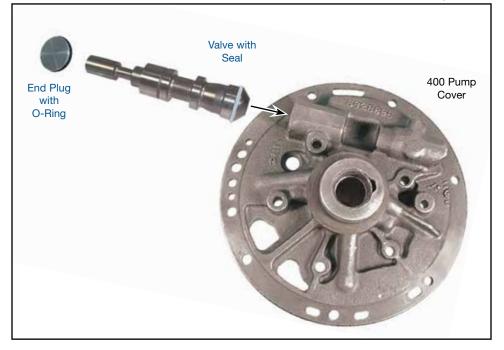


1. Disassembly

Remove OE pressure regulator valve and end plug from pump bore.

2. Installation & Assembly

- a. Install Sonnax PTFE seal in groove at end of Sonnax pressure regulator valve, as shown. Then size the seal on valve by inserting it backwards into the pump body bore.
- b. Install Sonnax O-ring in the groove on Sonnax end plug.
- c. Lubricate all parts.
- d. Install Sonnax assembly orientated as shown.

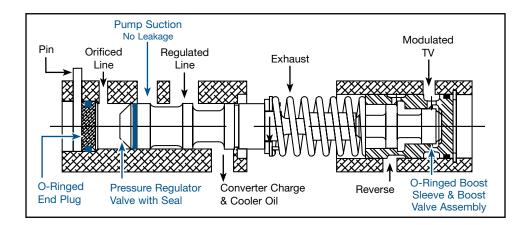

©2020 Sonnax Transmission Company, Inc. • A Marmon / Berkshire Hathaway Company

34910-03K-IN 06-23-20