Instructions

Mazda F4A-EL, F4EAT, FA4A-EL

Oversized Converter Relief Valve Kit

Part No.

74846-08**K**

- Valve
- Spring

Tool Kit



Part No. F-74846-TL8

- Reamer
- Reamer Jig
- Guide Pin

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the VB-FIX, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.

1. Disassembly

- a. Remove OE retainer clip and set aside for reuse.
- b. Remove OE converter relief valve and spring and discard.

2. Bore Reaming



WARNING: To ensure correct bore alignment, place casting on VB-FIX with bolt bosses facing upward as shown (**Figure 1**).

Ream converter relief bore (for reaming instructions/ reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-74846-TL8** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and body.
- b. Install Sonnax converter relief valve.
- c. Install Sonnax spring and secure with OE retainer clip.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg (Figure 2).





