Instructions

lenoid Modulator

Solenoid Modulator Accumulator Piston Kit

Part No. 39741-14K

- Accumulator Piston
- O-Ring

NOTE: Kit fits in either of two locations. Also fits in Ford (AF21) and Mazda (AW6A-EL) applications.



1. Disassembly

- a. Remove OE piston and springs.
- b. Discard OE piston.

2. Installation & Assembly



NOTE: The O-ring should not be installed on the piston unless there is severe wear or a ridge is worn near the bottom of the bore. If the O-ring is used, the bore surface must be buffed with 3M Scotchbrite or a smiliar material.

- a. If Sonnax O-ring is being installed, place it in Sonnax piston groove and roll on bench to size.
- b. Install Sonnax piston with O-Ring end first into the bore.



NOTE: After installing the piston, bottom it in the bore and insure it will not stick. You should be able to retract it with finger tension.

c. Reinstall OE springs and retainer plates.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

