TRANSMISSION PARTS

Instructions

Pump Flow Control Valve Kit

Part No. 56200-03K

- Valve Assembly
- O-Ring



1. Disassembly

Disassemble the pump and remove the flow control assembly.

2. Installation & Assembly

a. Install assembly with the opening pointing up.

b. Install O-ring on top of canister.

3. Final Testing

Before installing the plate, compress the plunger through its full stroke to ensure travel and return.