


Instructions

Spiral Retaining Ring Kit

Part No. 76554RK

- Spiral Retaining Rings (3)
- Locking Rings (3)

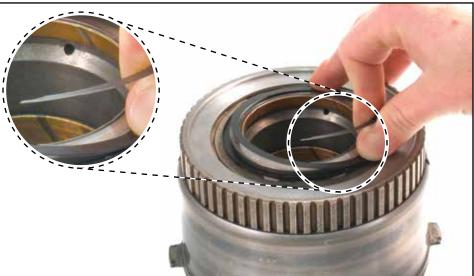




1. Disassembly

Remove and discard OE snap ring from intermediate roller clutch or mechanical diode assembly.

2. Installation & Assembly

- a. Install Sonnax locking ring, cup side facing up (Figure 1).
- b. Walk spiral ring into retaining groove (**main picture**). The locking ring may need to be moved for correct spiral ring positioning (**Figure 1**).
- c. Ensure spiral ring is fully seated in groove all the way around assembly.
- d. Stake locking ring in six equally-spaced places around the outside (Figure 2).

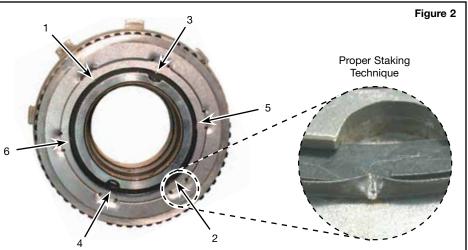

©2016 Sonnax Industries, Inc.