

TC Check Valve Kit

Part No.

98892-06K


- Valve
- Sleeve
- Spring
- Shim (2)

1 Extra



NOTE: This kit fits several Honda/Acura 4-speed, 3-shaft and 5-speed models. However, model to model, the appearance of valve bodies and location of the TC check valve bore varies. The BVGA '03-'05, 3.5L Pilot model is illustrated here. See Honda/Acura **98892-06K** application chart (below) for a detailed guide.

Honda, Acura 4-Speed, 3-Shaft, 5-Speed

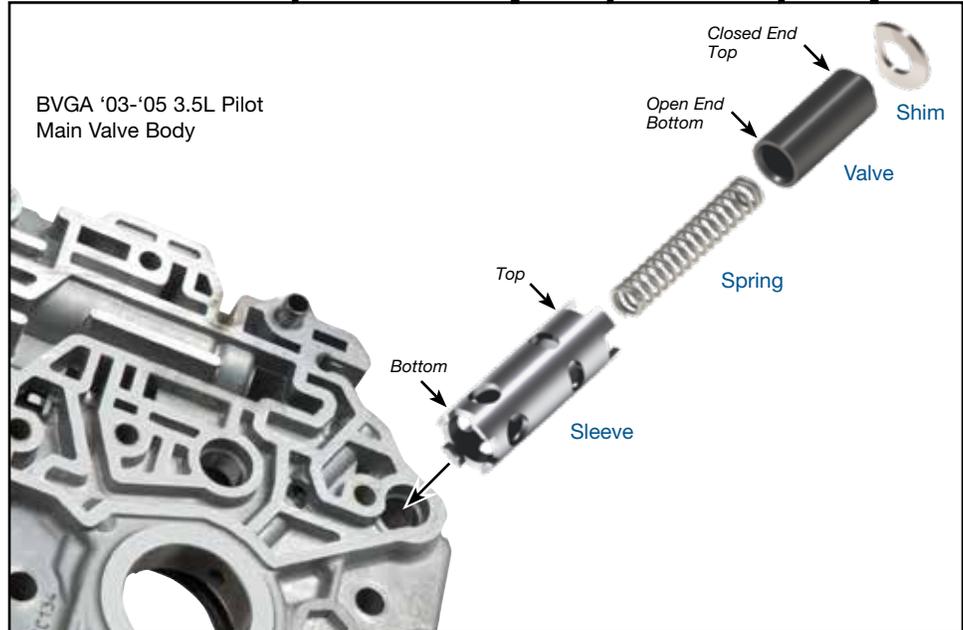

Honda/Acura 4/5 Speed 98892-06K Application Chart				
Make	Model	Year		Trans. Code
		From	To	
Acura	3.0CL	1996	2000	M7ZA
Acura	3.0CL	1997	2000	B7ZA
Acura	3.2CL	2001	2006	BGFA
Acura	3.2CL	2001	2006	MGFA
Acura	3.2TL	1999	1999	B7VA
Acura	3.2TL	2000	2003	M7WA
Acura	3.2TL	2001	2003	B7WA
Acura	MDX	2001	2002	MGHA
Acura	MDX	2001	2002	BGHA
Acura	TL	2004	2008	BDGA
Honda	Accord	1998	2002	B7XA
Honda	Accord	2003	2007	BAYA
Honda	Accord	2003	2007	MAYA
Honda	Odyssey	1999	2001	B7TA
Honda	Odyssey	1999	2001	B7YA
Honda	Odyssey	2002	2004	BYBA
Honda	Odyssey	2005	2007	BGRA
Honda	Odyssey	2005	2007	PGRA
Honda	Pilot	2003	2005	BVGA




NOTE: NOTE: Sonnax TC check valve kit is designed to fit in the main valve body, but will extend into the torque converter housing as well (Figure 1). Once main valve body and regulator valve body are assembled to the torque converter housing, the sleeve should occupy the entire height between those castings.

1. Disassembly

- Separate main valve body section from torque converter housing and the other valve body sections.
- With main valve body free, the OE TC check valve and spring can be removed from bore by sliding them out.

2. Installation & Assembly

- Be certain all debris has been removed from valve bore and the main valve body.
- Assemble main valve body section onto torque converter housing.
- Install Sonnax sleeve with larger castellations toward the top of main valve body and the round holes toward the bottom (main photo).
- Insert Sonnax spring into Sonnax sleeve.

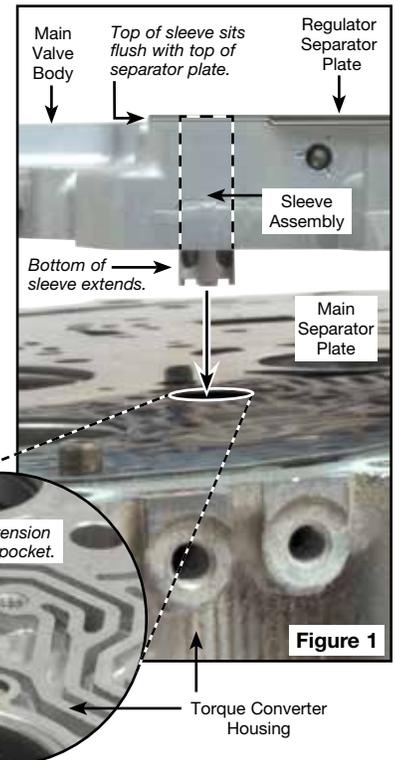

2. Installation & Assembly (continued)

- e. Install Sonnax TC check valve with the open spring pocket facing the bottom of main valve body (the side where pump gears reside); see main photo for reference.
- f. Install Sonnax shim onto regulator valve body, orienting shim in the casting (**Figure 2**). Shim can be held in place with a small amount of assembly lube. Reinstall regulator body, ensuring shim stays in place.

