TRANSMISSION PARTS

Instructions


# Hyundai/Kia A5GF1, A5HF1; Mitsubishi F4A41/42/51, F5A51, R4/V4A51, R5A51, V5A51

## TCC Control Valve Kit

### Part No. 41954-03K


- Valve
- Sleeve
- O-Ring


**NOTE:** May be used in '96-later Mitsubishi valve bodies including F4A41/42/51, R4/V4A51, R5/V5A51, F5A51 and Hyundai/Kia A5HF1 and A5GF1. However, OE valve spool diameters MUST be measured to verify application.

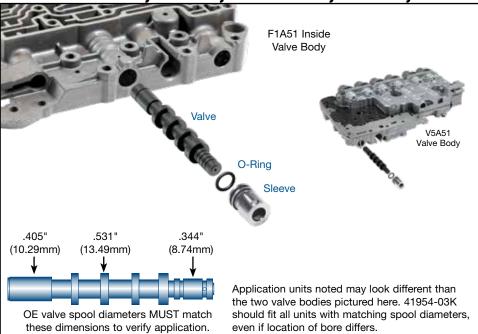

#### Figure 1

**NOTE:** Sonnax valve does not incorporate a long center bore and outboard spool cross-hole by design.

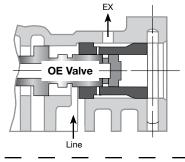

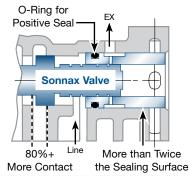

#### 1. Disassembly

Verify spool sizes, then remove and discard OE sleeve and valve. Save OE spring and retaining pin for reuse.

#### 2. Assembly & Installation

- a. Insert OE spring into replacement valve spring pocket.
- b. Place Sonnax O-ring into inboard sleeve groove, lube and roll on bench to size.
- c. With retaining pin hole in sleeve properly oriented with casting pin hole, push sleeve into bore and over valve spool gently.
- d. Insert OE retaining pin through casting and sleeve holes to secure.

#### 3. Final Testing

With gauge on DR pressure tap, damper release pressure should drop and remain at zero when in full TCC supply (**Figure 2**).

