TRANSMISSION PARTS

Instructions

Aisin AW 55-50SN, 55-51SN

Boost Valve Kit




Part No. 59947-07K

- Valve
- Sleeve

NOTE: Also fits AF23/33 and RE5F22A.



This kit should NOT be used with Sonnax oversized pressure regulator valve and spring in Sonnax 59947-12K.

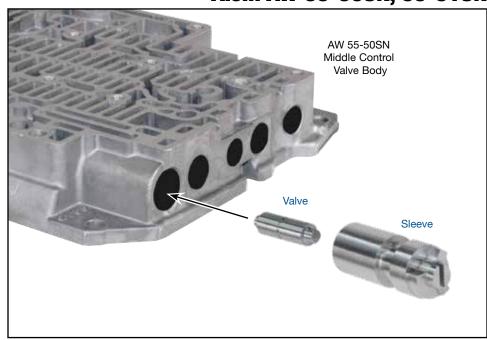

1. Disassembly



NOTE: Check step and note the location of OE retainer on OE sleeve end prior to removal.

- a. Remove all parts in valve bore.
- b. Discard OE boost sleeve and valve and keep other parts for reuse.

2. Installation & Assembly

- a. Be certain all debris has been removed from the valve bore and valve body.
- b. Reinstall OE pressure regulator valve and spring.
- c. Install Sonnax boost valve and sleeve assembly.
- d. Ensure OE retainer is set at the same step location on Sonnax sleeve as was previously noted.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

