

Instructions

Ford 6R140

Oversized Forward Clutch Latch Valve Kit

Part No. 126740-06K

- Valve
- Spring

Tool Kit


Part No. F-126740-TL6

- Reamer
- Reamer Jig
- Guide Pin
- Reamer Stop

NOTE: Sonnax "F-Tool" kits designed to service a specific bore require the **VB-FIX**, a self-aligning valve body reaming fixture. More information and instructions can be found online at www.sonnax.com.



WARNING: Tool kit F-126740-TL6 is also used for 126740-24. Use of the reamer stop is not required for use in 126740-06K.

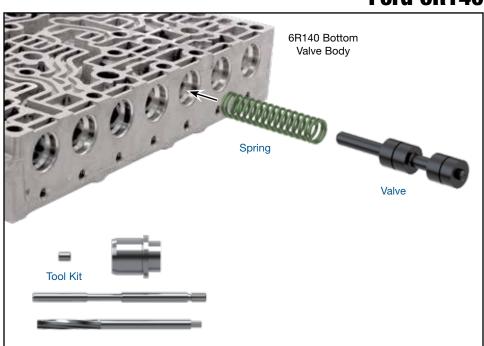

1. Disassembly

- a. Remove OE retaining clip and end plug, save for reuse.
 - b. Remove and discard OE valve and spring.

2. Bore Reaming


Ream forward clutch latch bore (for reaming instructions/reamer care, please visit www.sonnax.com). Sonnax reaming tool kit **F-126740-TL6** and **VB-FIX** are required for this operation.

3. Installation & Assembly

- a. Ensure all debris has been removed from valve bore and body.
- b. Install Sonnax spring.
- c. Install Sonnax valve, ensuring spring seats over spring guide.
- d. Reinstall OE end plug and retaining clip.

4. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in-Hg.

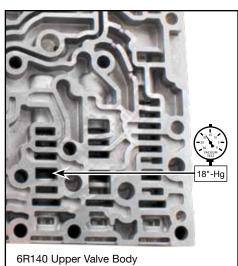

©2020 Sonnax Transmission Company, Inc. • A Marmon/Berkshire Hathaway Company