Instructions


### **Ford 5R110W**

## Pressure Switch O-Ringed End Plug Kit

# Part No. 36940-17K

- End Plug
- O-Ring

**NOTE:** Fits any of five locations.

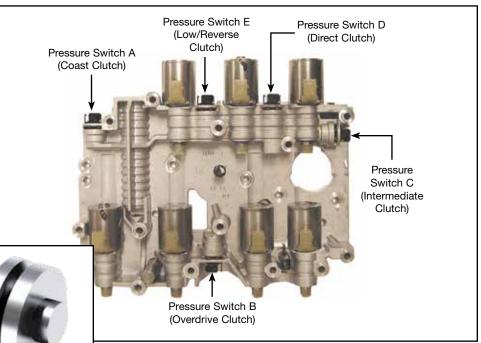

## 1. Disassembly Pressure Switch a. Remove OE re

- a. Remove OE retaining clip, set aside for reuse.
- b. Remove and discard OE pressure switch dummy plug.

#### 2. Installation and Reassembly

- a. Install O-ring in indicated Sonnax end plug groove. Coat with ATF or Translube and roll on bench to size.
- b. Install Sonnax O-ringed end plug into casting bore.
- c. Reinstall OE retaining clip.

O-Ringed End Plug