


TV Cable Corrector Kit

Part No.
AS1-01K

- Springs (5)
- Stops (5)

Ford AOD, AXOD; GM 200, 200-4R, 200C, 4L60

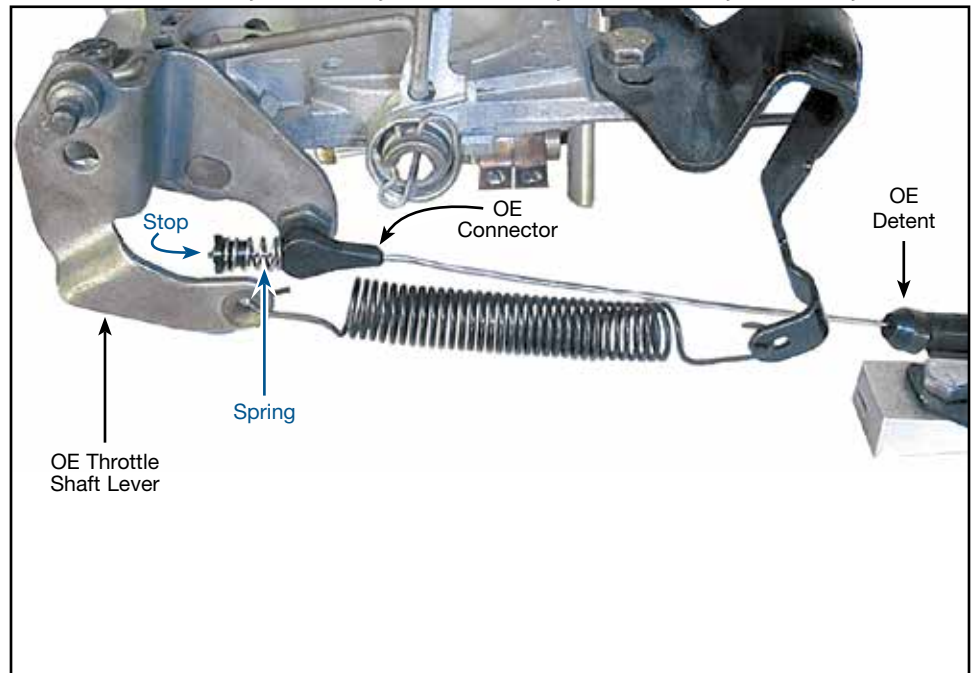

- Disconnect OE TV cable attachment element from throttle shaft lever.
- Slide OE TV cable attachment element down TV cable slightly.
- Slide Sonnax spring over end of OE TV cable until it butts with the OE TV cable attachment element.
- Slide OE TV cable above Sonnax spring into slot of retainer, flanged end away from spring.
- Slide Sonnax spring over retainer until it snaps into place and butts with the OE retainer flange.
- Reconnect OE TV attachment element onto OE throttle shaft lever.

NOTE: When the throttle shaft lever is stroked by hand, the spring collapses fully. This is not a problem because the amount of pull is less when the engine is running. Thus the spring will not fully compress unless the throttle is stroked to full throttle position.